

IC Recorder Quick Start Guide



ICD-SX733/SX1000

4-447-267-6(1)

© 2013 Sony Corporation Printed in China



Welcome to your new Sony IC recorder!

This is the Quick Start Guide, which provides you with instructions on the basic operations of the IC recorder. Please read it carefully. We hope you enjoy using your new Sony IC recorder.

Check the supplied items.


- IC Recorder (1)
- Stereo headphones (1)
- USB connection support cable (1)
- Carrying case (1)
- Stand (1)
- Wind Screen (ICD-SX1000 only) (1)
- Application Software, Dragon NaturallySpeaking (DVD-ROM) (1)*
- Quick Start Guide (1)
- Application Software, Sound Organizer (Installer file stored in the built-in memory so that you can install it to your computer.)
- Help Guide (HTML file stored in the built-in memory so it can easily be copied to your computer.)
- * supplied with some models in some regions.

Optional accessories


- Electret condenser microphone ECM-CS10, ECM-CS3, ECM-TL3
- USB AC adaptor AC-UD20

Note
Depending on the country or region, some of the models or optional accessories are not available.

Parts and controls

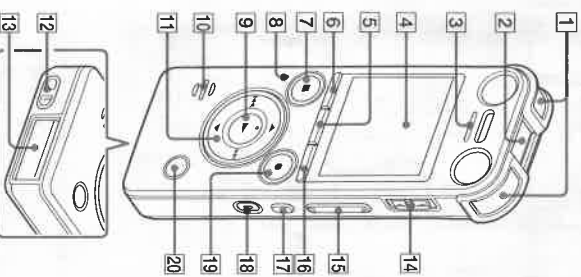


- 1 Built-in microphones (stereo) (L/R)
- 2 Built-in zoom microphone (monaural)
- 3 Peak lamp (ICD-SX1000 only)
- 4 Display window
- 5 SCENE button
- 6 (folder) button
- 7 STOP button
- 8 Access lamp
- 9 (play/enter) button (*)
- 10 Speaker
- 11 Control button (▲, ▼, ◀, ▶) (review/fast backward), ▶▶ (cue/fast forward)
- 12 Strap hole (A strap is not supplied.)
- 13 USB connector compartment (The USB connector is stored inside.)
- 14 POWER ON/OFF+HOLD switch
- 15 VOL -/+ (Volume -/+) buttons (**)
- 16 MENU button
- 17 ◀ A-B (repeat A-B) button
- 18 ERASE button
- 19 ● REC/PAUSE (record/pause) button, recording lamp
- 20 TRACK MARK button

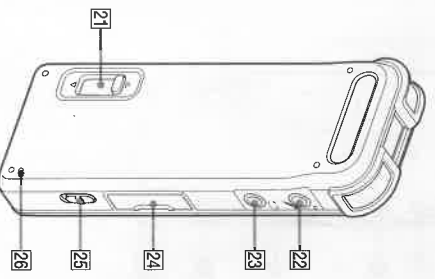

- 21 USB DIRECT slide lever
 - 22 (microphone) jack (PLUG IN POWER) (**)
 - 23 (headphones) jack
 - 24 M2™/microSD memory card slot (The card slot is in the cover.) (**)
 - 25 DPC (SPEED)/KEY CTRL (control) switch
 - 26 RESET button
- *1 These buttons and the jack have a tactile dot. Use it as a reference point for operations, or to identify each terminal.
- *2 In this Quick Start Guide, M2™ and microSD cards are generally referred to as a "memory card." The M2™/microSD card slot is referred to as the "memory card slot."


Let's try out your new IC recorder

1. Charge.

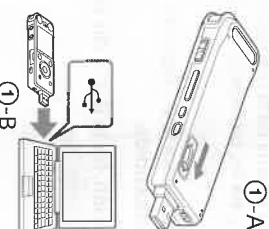

- 1 Charge the IC recorder.
Slide the USB DIRECT slide lever in the direction of the arrow (1-A), and insert the USB connector into the USB port of a running computer (1-B).
Charging starts.
When the battery is fully charged, the battery indicator will indicate "Full."
- 2 Disconnect the IC recorder.
Make sure that the access lamp does not light. Then refer to help guide to remove the IC recorder safely.

2. Power on.

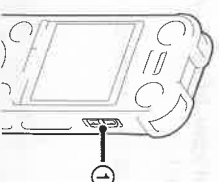


- 1 Turn the power on.
Slide and hold the POWER ON/OFF+HOLD switch in the direction of "POWER ON/OFF" until the window display appears.
To turn the power off, slide and hold the POWER ON/OFF+HOLD switch in the direction of "POWER ON/OFF" until the "Power Off" animation is displayed.
* When you turn the power on again within 4 hours after the last time you turned the power off, the power will come on quickly.

To prevent unintentional operations (HOLD)




* To release the IC recorder from the HOLD status, slide the POWER OFF+HOLD switch towards the center so that the projection on the switch is aligned to the "*" mark.

3. Set the date and time.

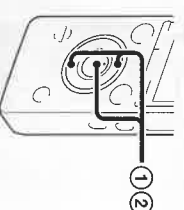


- 1 Press ▲ or ▼ to select "Yes," and then press ▶ (play/enter).
The year section begins to flash.
- 2 Press ▲ or ▼ to set the year (the last two digits of the year) and then press ▶ (play/enter). Repeat this procedure 1 set month, day, hour, and minute in sequence.
When you set the minute and press ▶ (play/enter), the clock reflects the setting.

4. Select the display language.

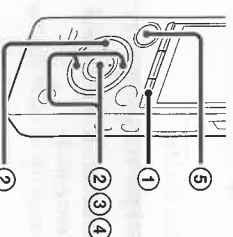


- 1 Press MENU.
- 2 Press ◀▶, press ▲ or ▼ to select ◻, and then press ▶ (play/enter).
- 3 Press ▲ or ▼ to select "Language," and then press ▶ (play/enter).
- 4 Press ▲ or ▼ to select the language that you want to use: the display window, and then press ▶ (play/enter).
You can select the following languages:
English*, Spanish (Spanish), Français (French)
* Default setting
- 5 Press ■ STOP.

5. Record.

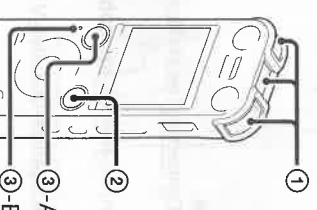


- 1 Before you start using the IC recorder, make sure that you slide the POWER ON/OFF+HOLD switch towards the center so that the projection on the switch is aligned to the "*" mark to release the status.
- 1 Place the IC recorder so that the built-in microphones face the direction of the source to be recorded.
- 2 Press ● REC/PAUSE.
Recording starts and the recording lamp (2) lights in red.
* You can pause recording by pressing ● REC/PAUSE. Press ● REC/PAUSE again to restart recording.
- 3 Press ■ STOP (3-A) to stop recording.
The access lamp (3-B) flashes in orange and the recording stops.

6. Listen.

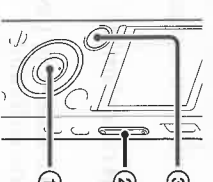

- 1 Press ▶ (play/enter).
Playback starts.
- 2 Adjust the volume by pressing VOL -/+.
- 3 Press ■ STOP to stop playback.

7. Erase.

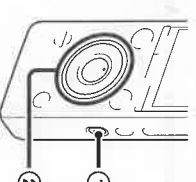

- 1 Once a file is erased, you cannot restore it.
- 1 Press ERASE.
"Erase?" is displayed and the file to be erased is played back confirmation.
- 2 Select "Execute" using ▲ or ▼, and then press ▶ (play/enter).
The "Erasing..." animation appears while the selected file is being erased.

Note

The illustrations used in this Quick Start Guide are based on the ICD-SX1000 model. These illustrations may look different from the model you are using, however, the buttons and controls used for operations are the same.