

# DO NOT DISCARD

## INSTALLATION INSTRUCTIONS:

1. Connect the connector of controller to the sewing machine attachment receptacle shown as fig. 1.



FIG.1

2. If the sewing machine has a power supply switch, the switch should be placed in "OFF" position prior to connection of plug to the electrical outlet.
3. Connect the controller source plug to electrical outlet shown as fig.2. This appliance has a polarized plug (one blade wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

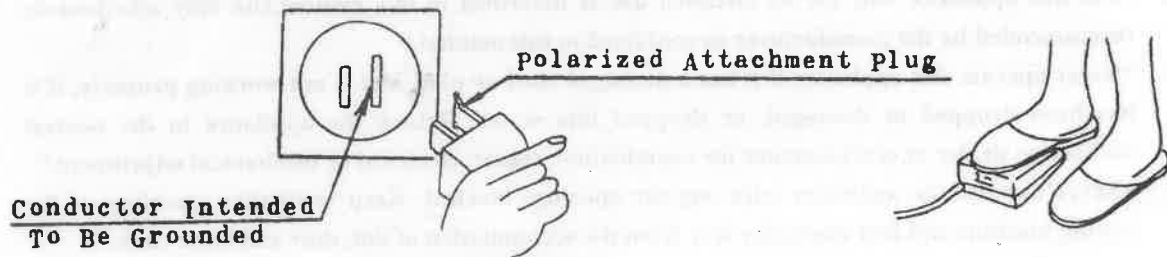


FIG.2


FIG.3

## OPERATION INSTRUCTION:

1. Place the controller on flat, dry surface and available for pedalling properly and comfortably.
2. Turn the switch of power supply to "ON" position.
3. Press-down on the upper cover of the foot controller (see fig.3) to control the speed of the sewing machine.
4. Whenever operation is terminated, turn the switch to "off" position.
5. Disconnect the source plug from electric outlet.
6. To store the foot controller, please place at a dry and good ventilation position.

# INSTRUCTION MANUAL

This instruction manual describes safety precautions. Installation instructions and operation instructions of the household-use sewing machine speed controller manufactured by Zhejiang Founder Motor Corporation LTD

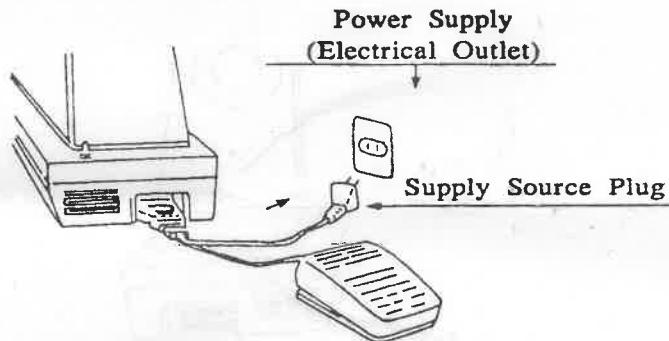

## IMPORTANT SAFETY INSTRUCTION

When using an electrical appliance basic safety precautions should always be followed, including the following: Read all Instructions before using (this appliance).

**DANGER**-To reduce the risk of electric shock:

1. "This appliance should never be left unattended when plugged in. Always unplug this appliance from the electric outlet immediately after using and before cleaning."

**WARNING**-to reduce the risk of burns, fire, electric shock, or injury to persons

1. "Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children."
2. "Use this appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual."
3. "Never operate this appliance if it has a damaged cord or plug. If it is not working properly, if it has been dropped or damaged, or dropped into water, Return the appliance to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment."
4. "Never operate the appliance with any air openings blocked. Keep ventilation openings of the sewing machine and foot controller free from the accumulation of lint, dust and loose cloth."
5. "Never drop or insert any object into any opening."
6. "Do not use outdoors."
7. "Do not operate where aerosol (spray) products are being used or where oxygen is being administered."
8. "To disconnect, turn all controls to the off ("o") position, then remove plug from outlet."
9. "Do not unplug by pulling on cord. To unplug grasp the plug. Not the cord."
10. "Keep fingers away from all moving parts. Special care is required around the sewing machine needle."
11. "Always unplug sewing machine from the electrical outlet when removing covers, lubricating, or when making any other user servicing adjustments mentioned in the instruction manual."
12. "Before connecting the power, make sure the voltage and cycles shown on electrical data plate of machine (or motor) conform to your electrical power."

**SAVE THESE INSTRUCTIONS**